

How to back up the recordings of the WBOX Hybrid DVR on a USB flash drive?

Product Models:

Hybrid DVR
WBXHD041S & 1T
WBXHD082S & 2T
WBXHD162S & 4T


Firmware Version: V4.1.XXXX.0000.157.X.XX.X.X


Important Note:

- The maximum storage capacity of the supported USB flash drive is 64GB.
- Ensure that the USB flash drive is formatted properly – **exFAT for 64GB** and **FAT32 for 32GB & below**.
- Make sure that the USB flash drive and the mouse are both connected on the USB ports at the back of the device.


Procedure:

Option 1 – Replay Menu


1. On the monitor main screen, hover your mouse to the bottom of the screen and click the **Replay**  icon.

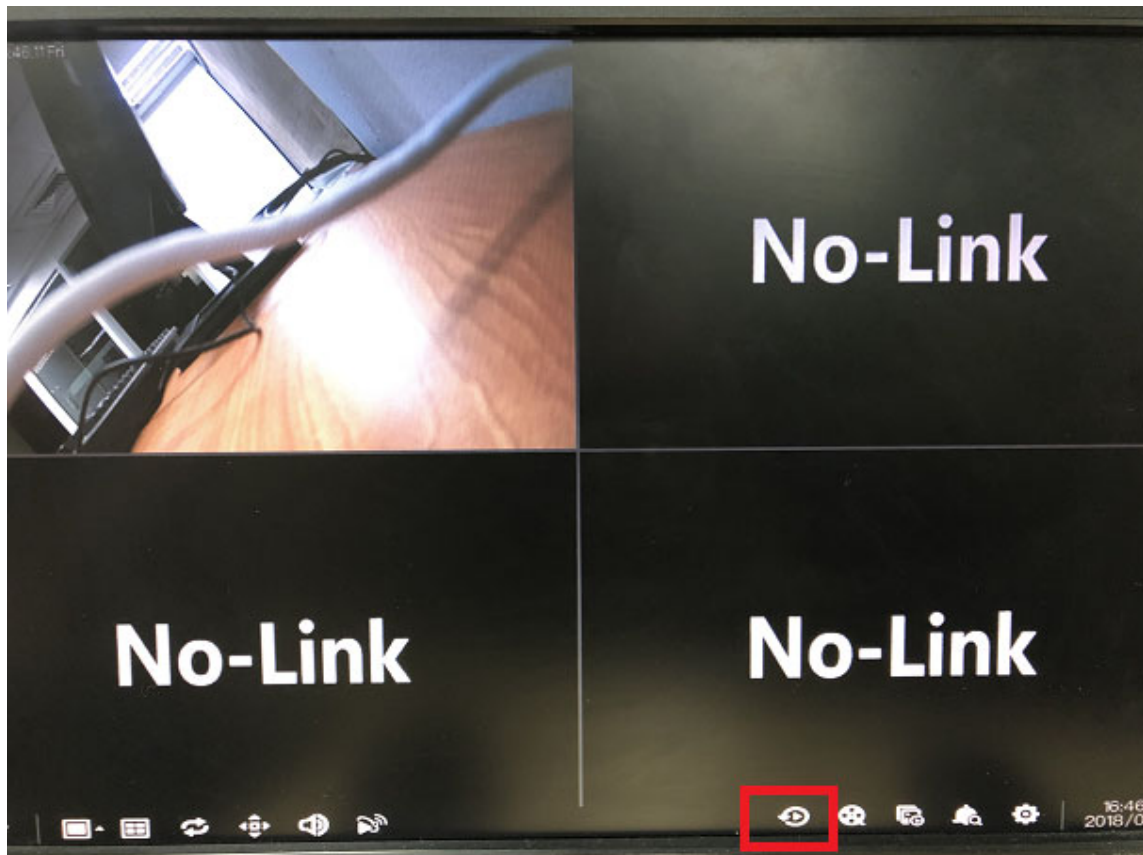

2. Make sure that the USB flash drive is being detected. If you see a red X icon, it means that there is no USB detected. You may need to unplug the USB flash drive and plug it back in.

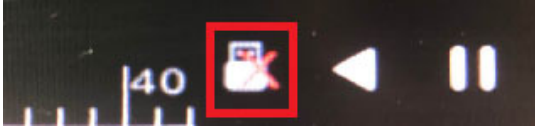

3. Choose the recording that you want to back up by dragging the timeline at the bottom left side of the screen.

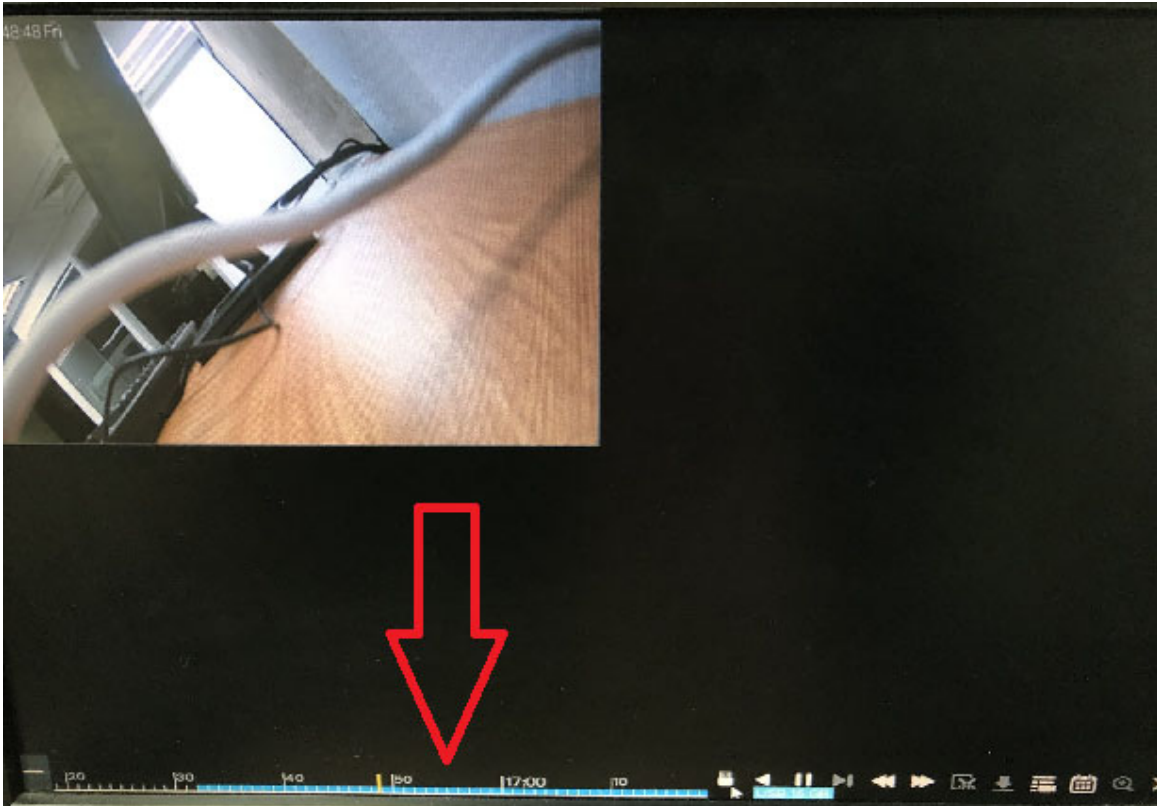

4. Click the scissor icon to start to backup process.




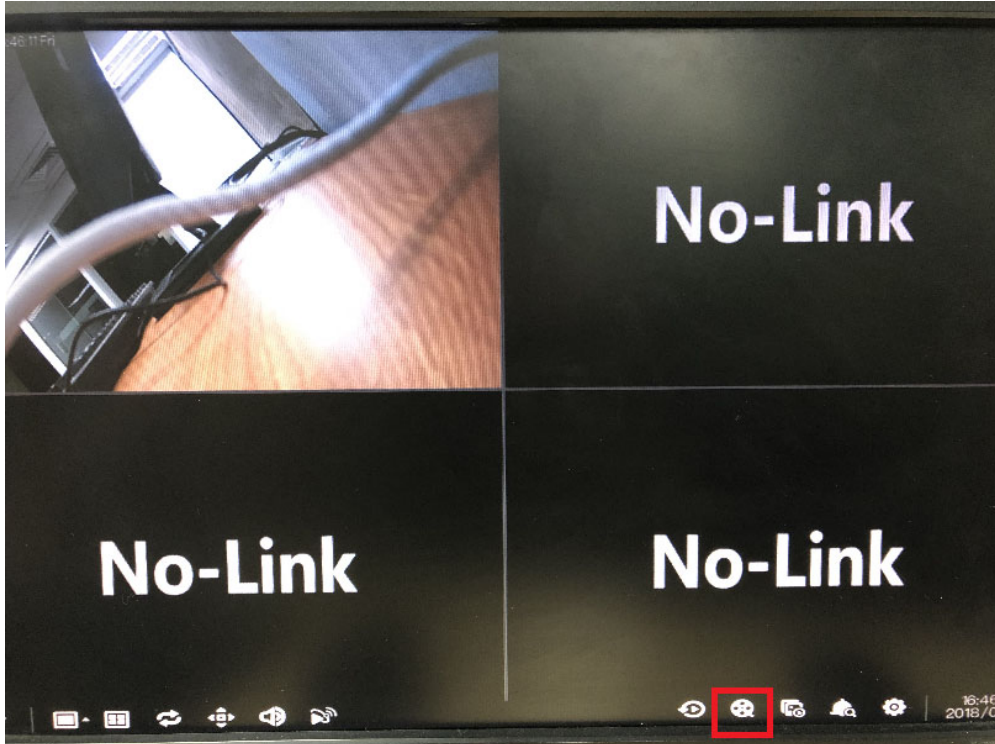
5. Once done, click the end backup icon to stop the process.




6. The recording will be automatically saved on the USB flash drive.

Option 2 – Time Search Menu

1. On the monitor main screen, hover your mouse to the bottom of the screen and click the Search  icon



2. Choose the channel that you want to back up. Search for the specific date. Drag the timeline to the start of the recording you wish to back up.

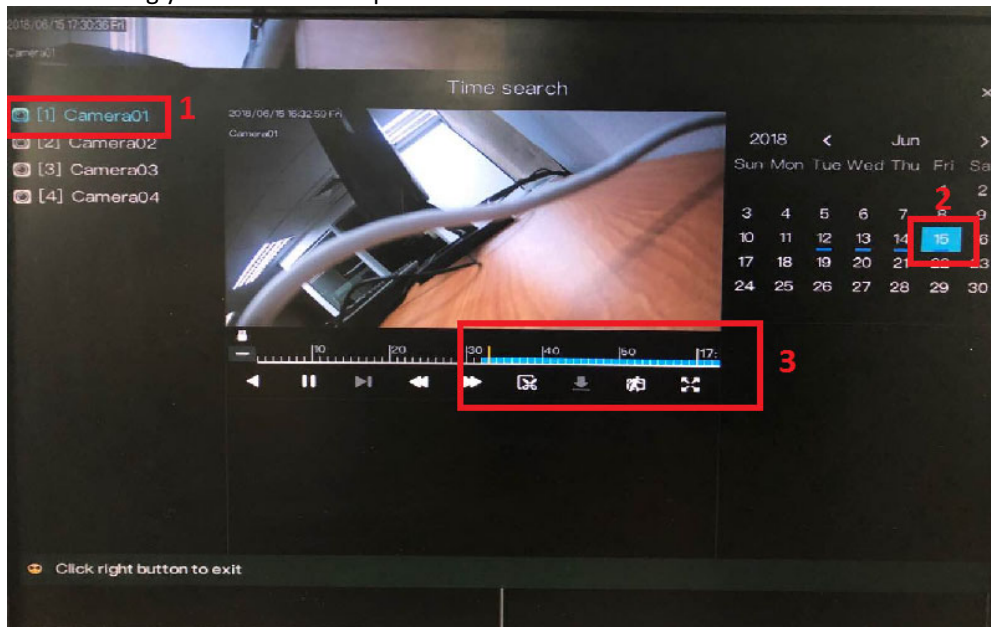

3. Click the scissor icon to start to backup process.




4. Once done, click the end backup icon to stop the process.




5. The recording will be automatically saved on the USB flash drive.

Option 2 – Timeline Menu

1. On the monitor main screen, do a right click on the mouse then select **Timeline**.

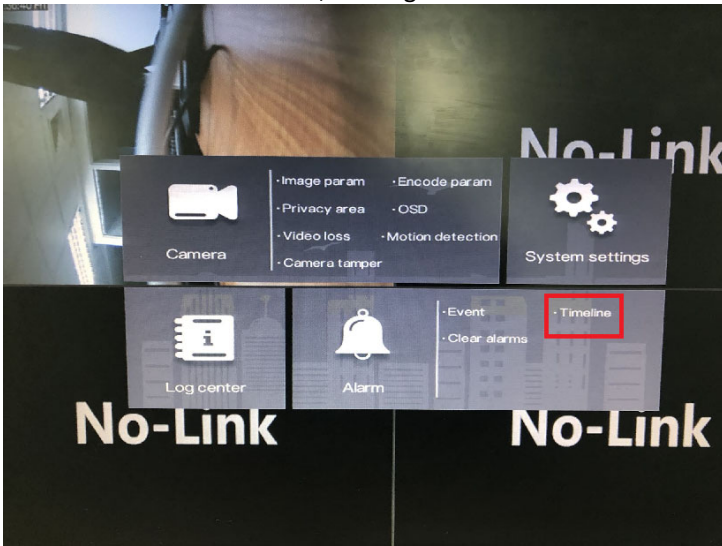


2. Choose the channel and the date/day that you want to back up.

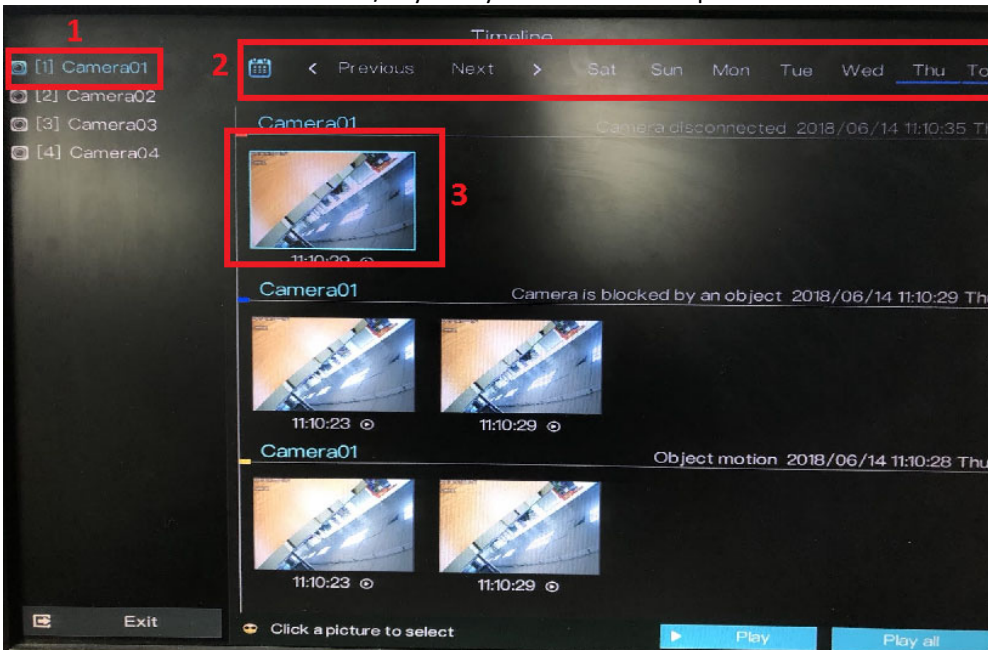


3. Select and play the specific recording that you want to backup then drag the timeline to the start of the recording.



4. Click the scissor icon to start to backup process.

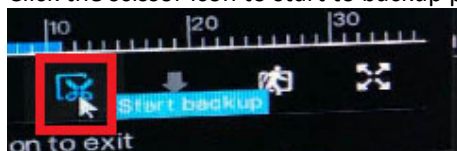

5. Once done, click the end backup icon to stop the process.

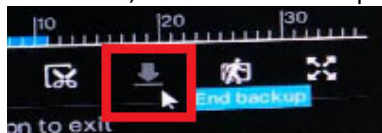

6. The recording will be automatically saved on the USB flash drive.