


## What is the use of the joystick on my WBOX HD 4-in-1 (analog) camera?

### Product Models:

0E-HDD1MP28	0E-HDB1MP36	0E-HDD2MP28
0E-HDD1MP28G	0E-HDB1MP36G	0E-HDD2MP28G
0E-HDB2MP36	0E-HDDMO2812	0E-HDBMO2812
0E-HDB2MP36G	0E-HDDM2812G	0E-HDBM2812G

You can use the joystick (five buttons) attached to one of the camera wires/lines to access the OSD menu of the camera. You can switch the control keys, function keys, check and set parameters of the camera as shown below.

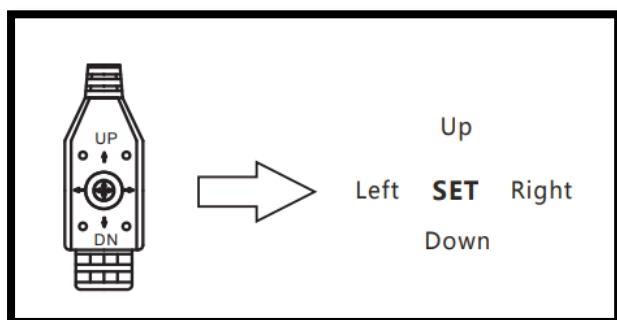

- **SET** (center) – it is used to enter the OSD menu or select the menu items.
- **UP** and **DOWN** – are used to select the menu items upwards and downwards
- **LEFT** and **RIGHT** – are used to select the menu items horizontally or modify the parameters.

### IMPORTANT NOTES:

Please note the OSD Menu will only show up on the monitor if the video signal of the camera matches the video signal of the DVR it is connected to.

By default, the WBOX HD 4-in-1 Analog Cameras are set to TVI.

- Press and hold the **LEFT** button for 5s to switch to **AHD** mode for output of the 1080PAHD signal.
- Press and hold the **RIGHT** button for 5s to switch to **TVI** mode for output of the 1080P TVI signal.
- Press and hold the **UP** button for 5s to switch to **CVBS** mode for output of the 960H analog signal.
- Press and hold the **DOWN** button for 5s to switch to **CVI** mode for output of the 1080P CVI signal.

