

How to back up the recordings of the WBOX Hybrid DVR into a USB flash drive?

This article outlines the steps in creating a backup of the DVR recordings into a USB flash drive.


Product Models: WBXHD041S1T, WBXHD041S, WBXHD082S2T, WBXHD082S, WBXHD162S4T and WBXHD162S.

Preparation: Properly insert the USB flash drive into the USB port for the DVR (front or back panel)


Back up recordings for all channels on the same specified date and time

1. On the monitor main screen, hover your mouse to the bottom of the screen and click the


Replay  icon

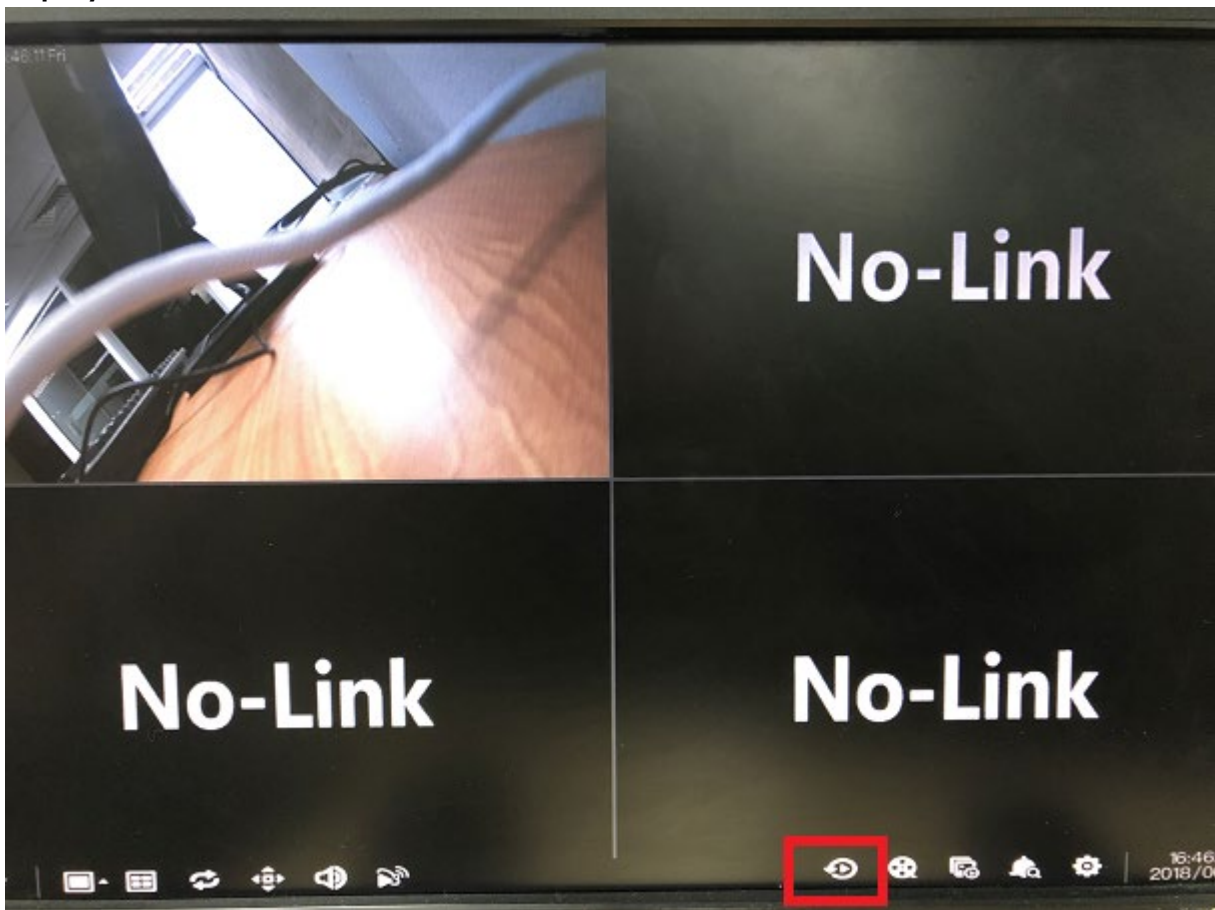


2. Make sure that the USB flash drive is being detected. If you see a red **X** icon, it means that there is no USB detected. You may need to unplug the USB flash drive and plug it back in.

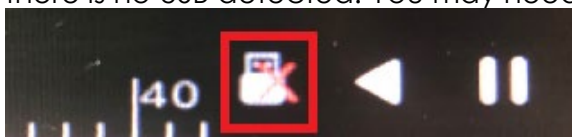

3. Choose the recording that you want to back up by dragging the timeline at the bottom left side of the screen.

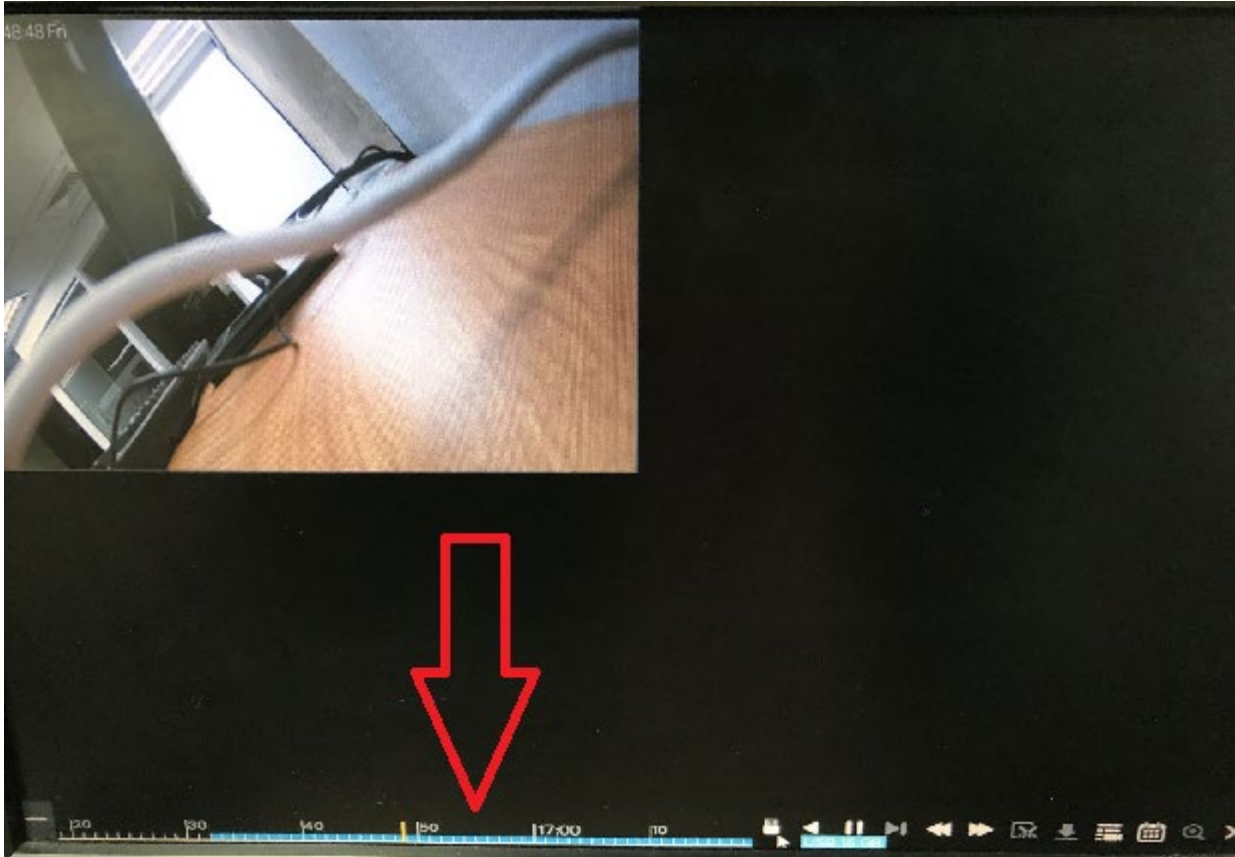

4. Click the scissor icon to start to backup process.



5. Once done, click the end backup icon to stop the process.




6. The recording will be automatically saved on the USB flash drive.

Back up recordings for a specific channel (2 options)


OPTION 1

1. On the monitor main screen, hover your mouse to the bottom of the screen and click the

Search  icon

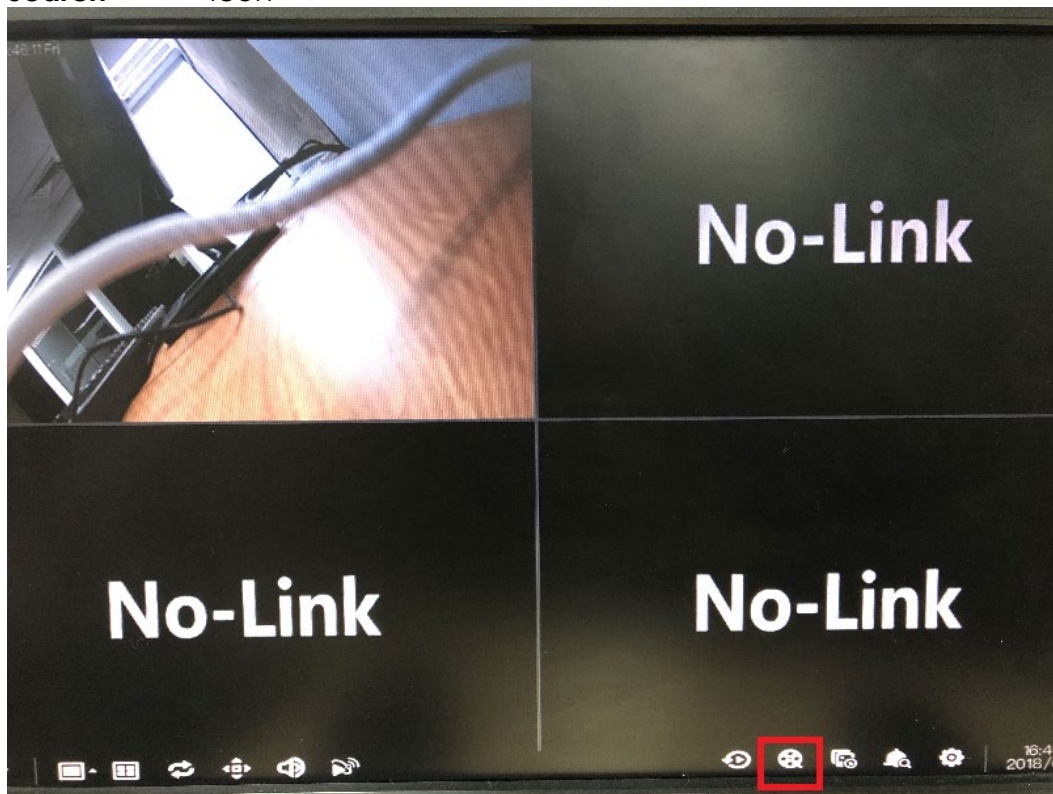

2. Choose the channel that you want to back up. Search for the specific date. Drag the timeline to the start of the recording you wish to back up.

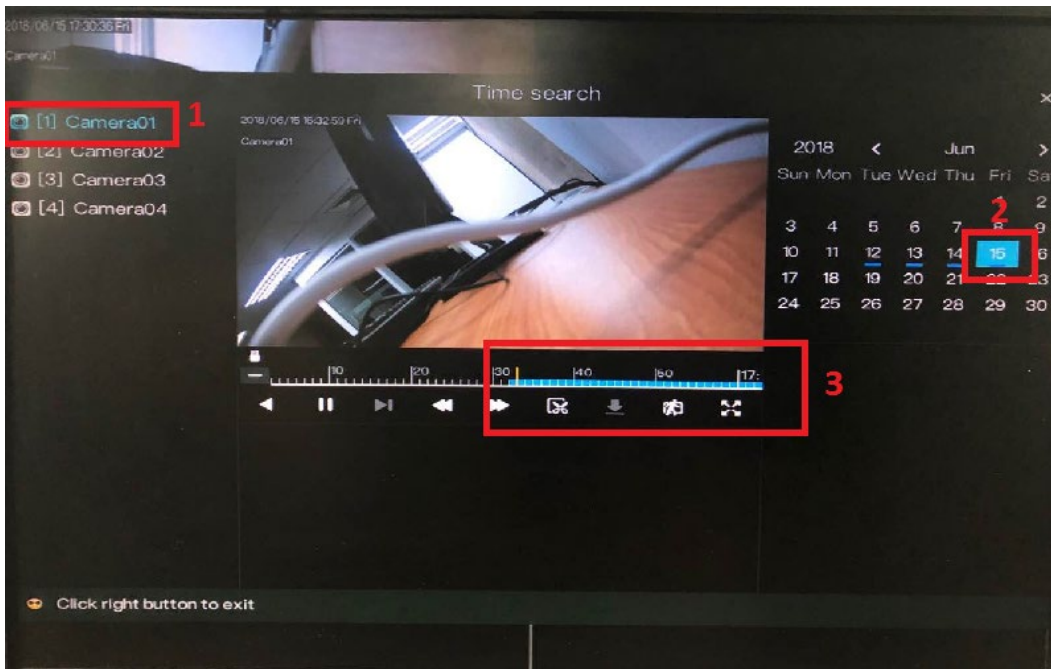

3. Click the scissor icon to start to backup process.




4. Once done, click the end backup icon to stop the process.




5. The recording will be automatically saved on the USB flash drive.

OPTION 2


1. On the monitor main screen, do a right click on the mouse then select **Timeline**

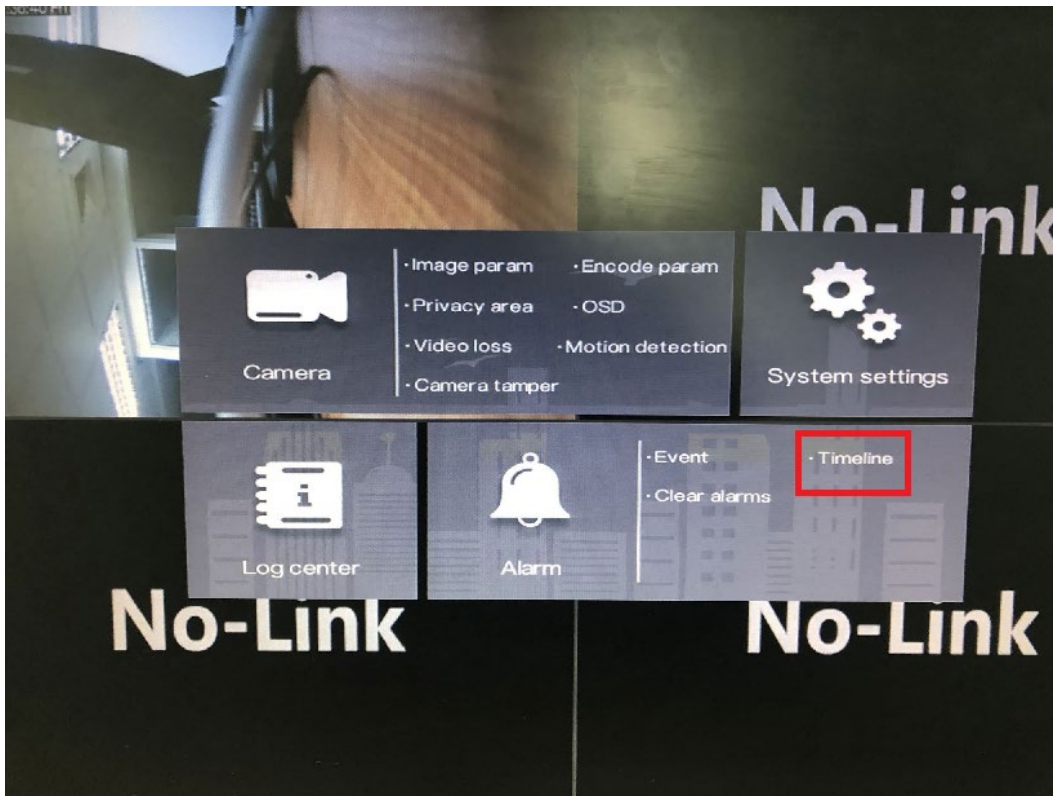

2. Choose the channel and the date/day that you want to back up.

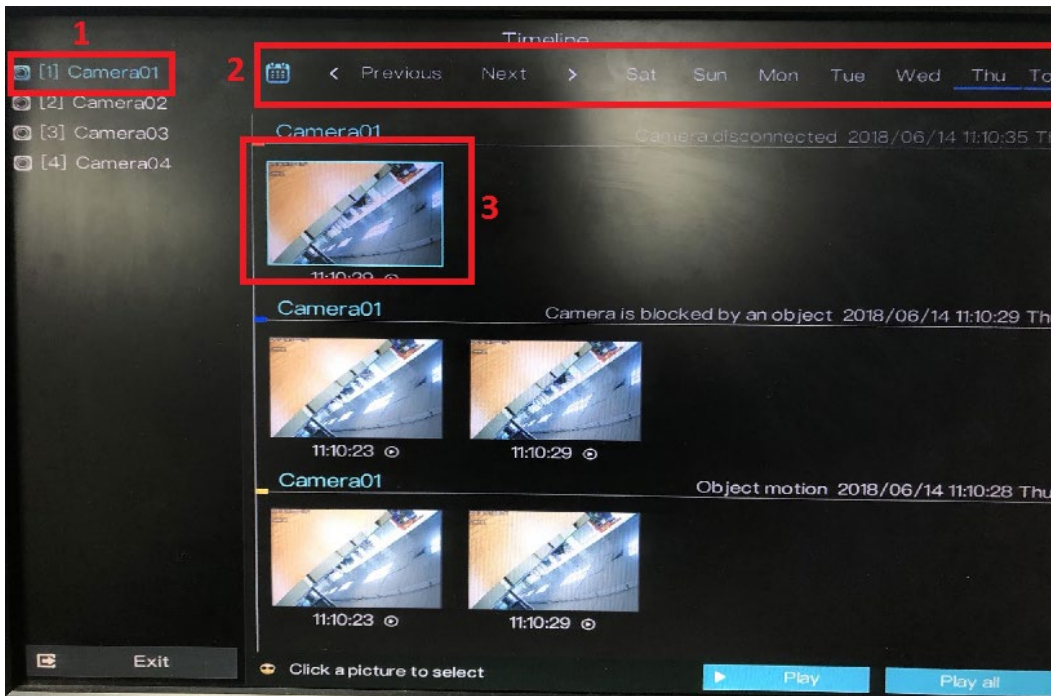


3. Select and play the specific recording that you want to backup then drag the timeline to the start of the recording.

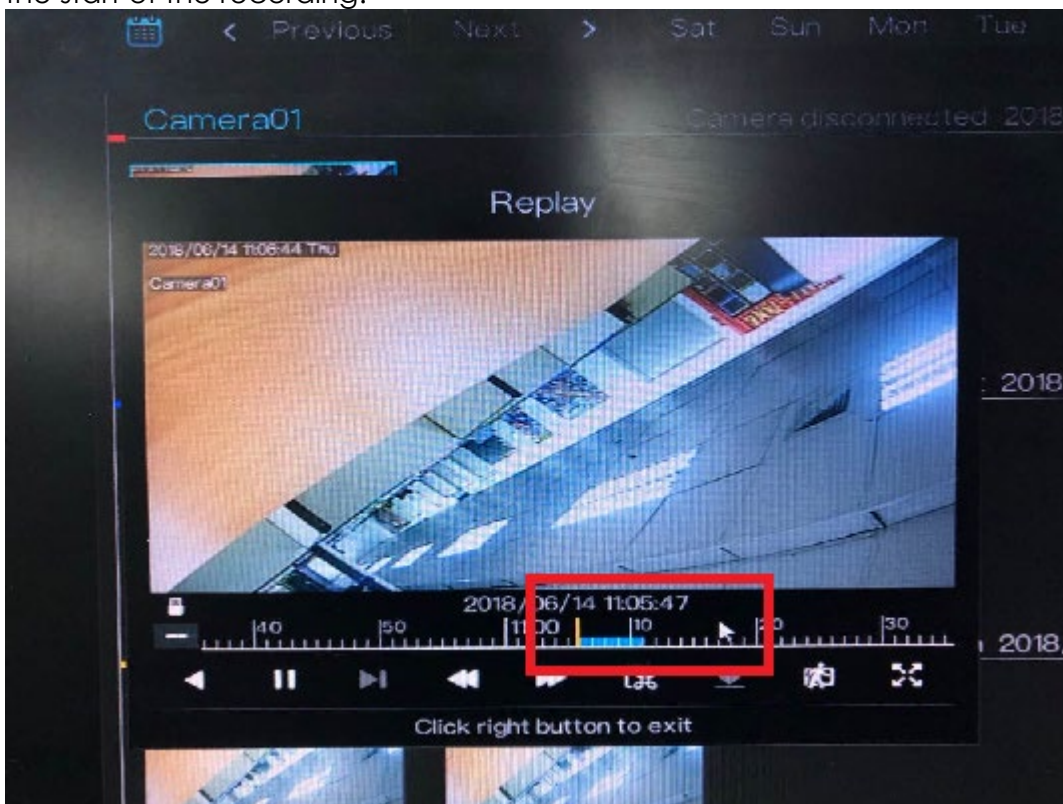

4. Click the scissor icon to start to backup process.



5. Once done, click the end backup icon to stop the process.

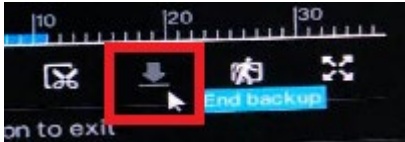

6. The recording will be automatically saved on the USB flash drive.